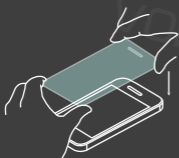# VONUO

**Tempered Glass**
Quick Installation Guide

Clean the screen by using the wet wipe pad and remove any remaining dust particles using the included adhesive strips.

Carefully peel protective film from the adhesive side of the glass screen protector. Make sure you don't touch this side with your fingertips.

Align screen protector cut-outs to the device and make sure adhesive side faces down ready to apply.

Press on the center of glass to remove any bubbles by pushing them from the middle out to the edge.